


# Maker Workstation Layer Guide 7224

	Dog Holes		Riser Locations
	Top Attach Holes		Side Plate Pockets
	Hold-Down Holes		T-Nut Locations
			Block Holes


 3/4"

 1/4"     5/16"    

## Middle Layer T-Nuts & 1/4" Side Plate Pockets on Bottom

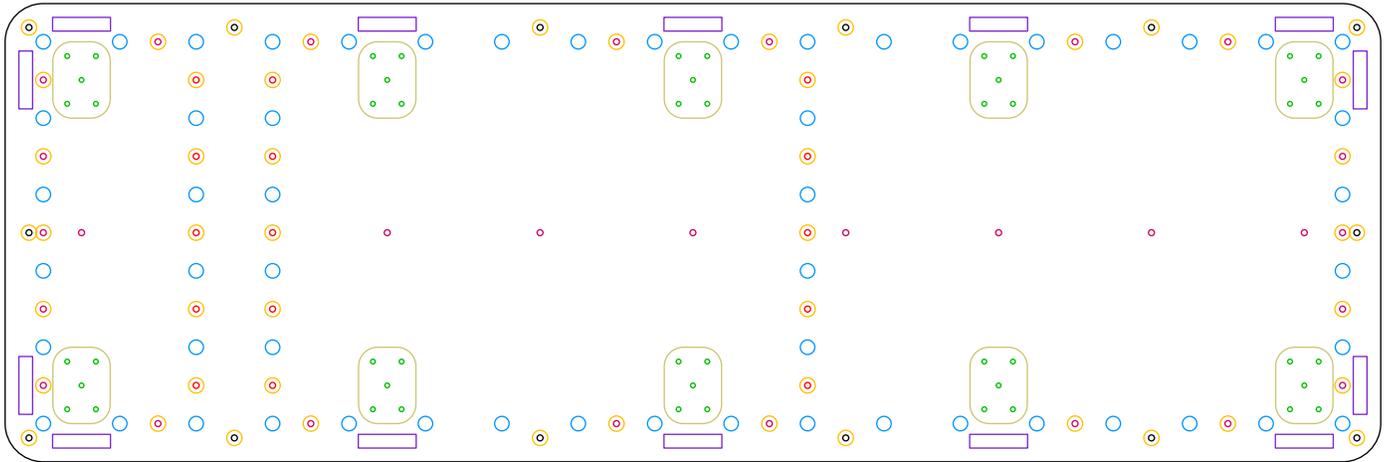

## Bottom Layer T-Nuts & 1/4" Side Plate Pockets on Top

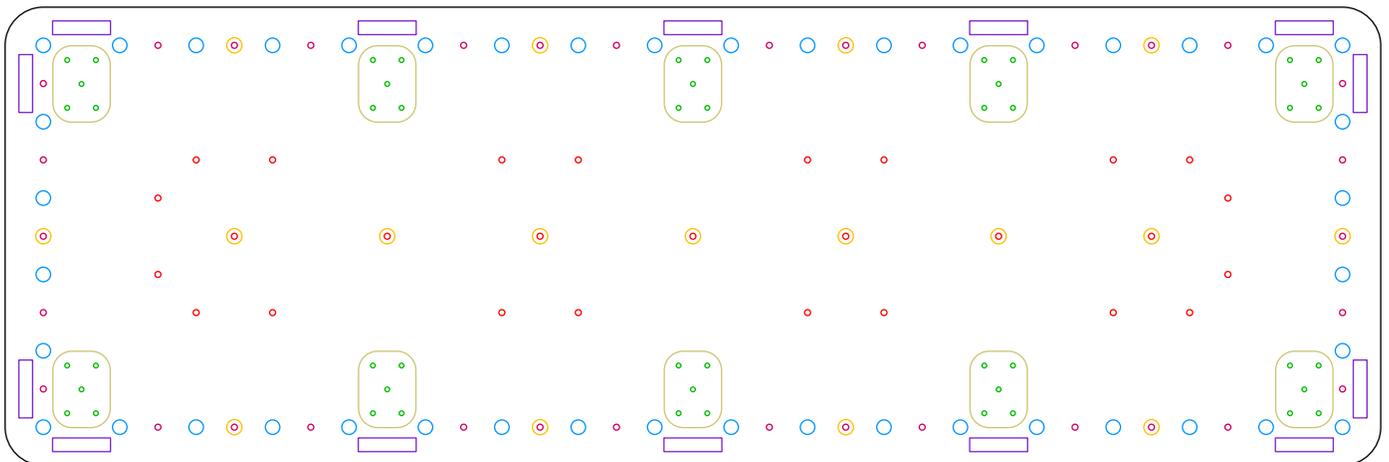

## Top Layer Countersink Attachment Holes on Top

